


## SAFEMASTER Emergency Stop Monitor BH 5922, BL 5922




- To monitor max. 16 single-channel e-stop buttons or 8 2-channel e-stop buttons
- E-stop button can be connected directly to BH 5922
- Simple wiring of e-stop buttons
- Extendable in steps of 8 e.g. 16 inputs
- No influence on e-stop system
- Adjustable
  - with manual reset (without link X1 / X2)
  - with automatic reset (with link X1 / X2)
- Reset button and remote reset
- LED indicators to show the state of the e-stop buttons
- As option direct connection of 2-channel e-stop buttons to BH 5922 / BL 5922
- As option with BCD output (high or low active) or CANopen
- As option with CANopen according to DS301 version 3.0
- BH 5922: width 45 mm
- BL 5922: width 90 mm


### Circuit Diagrams

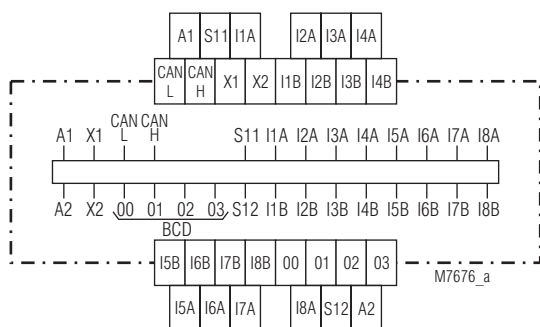

**E-stop button single-channel connection (8 inputs)**  
BH 5922.08, BH 5922.08/00\_, BH 5922.08/10\_

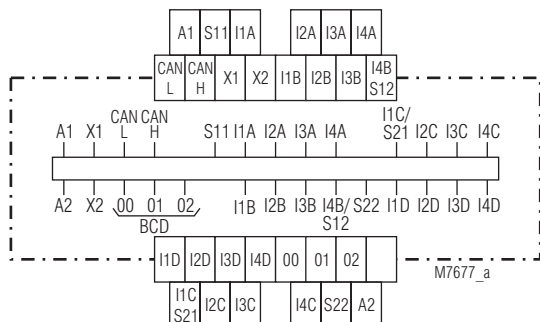

**E-stop button 2-channel connection (4 inputs)**  
BH 5922.04/01\_, BH 5922.04/11\_

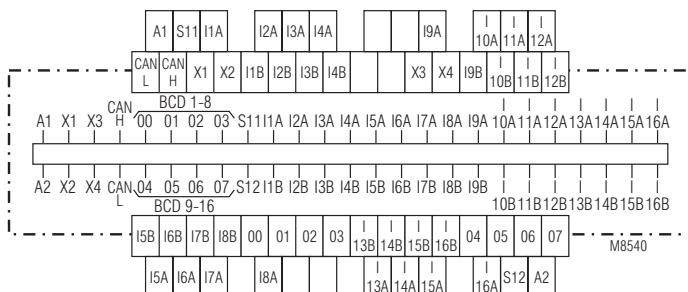


**E-stop button single-channel connection (16 inputs)**  
BL 5922.16/00\_, BL 5922.16/10\_


### Approvals and Markings



### Circuit Diagrams

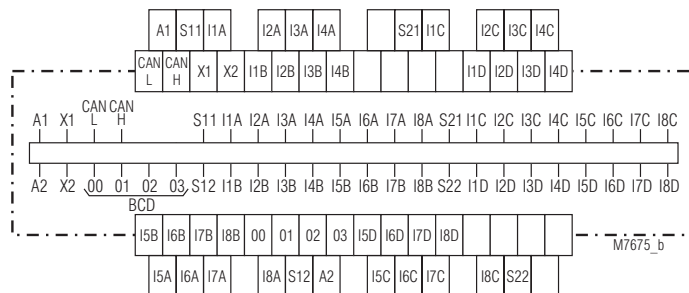


**E-stop button 2-channel connection (8 inputs)**  
BL 5922.08/01\_, BL 5922.08/11\_

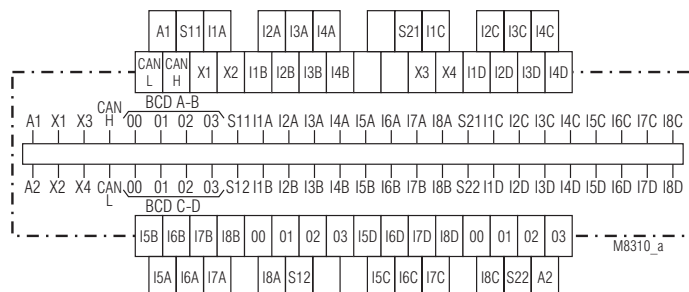

**E-stop button 2-channel connection, 2-channel reset for cross fault monitoring systems (8 inputs)**  
BL 5922.08/03\_, BL 5922.08/13\_

## Circuit Diagram

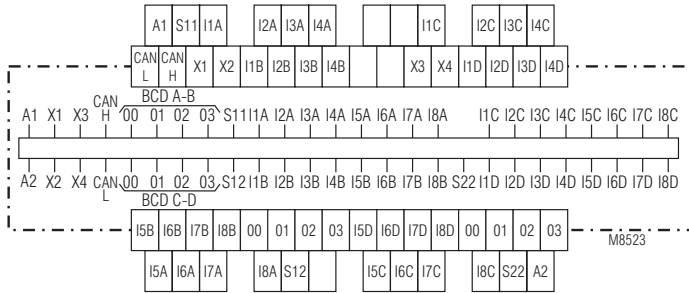

### E-stop button 2-channel connection, 2-channel reset for systems without cross fault monitoring (8 inputs)

BL 5922.08/02\_, BL 5922.08/12

## Connection Terminals

Terminal designation	Signal description
A1+, A2	Supply voltage
X1, X2	Remote reset channel 1
X3, X4	Remote reset channel 2
I1A ... I16A, I1B ... I16B	Inputs for e-stop button channel 1
I1C ... I8C, I1D ... I8D	Inputs for e-stop button channel 2
S11, S12	Inputs for e-stop loop channel 1
S21, S22	Inputs for e-stop loop channel 2
O0, O1, O2, O3 BCD A-B	Semiconductor state outputs for channel 1
O0, O1, O2, O3 BCD C-D	Semiconductor state outputs for channel 2
CAN L, CAN H	CAN-Bus

## Applications

Indication of the status of e-stop buttons in an e-stop chain. We recommend to use the BH 5922 together with DOLD E-stop modules (approval).

## Function

If all the e-stop buttons are closed all green LEDs are on. If one button is activated the corresponding LED goes off.

The e-stop buttons are connected in series, therefore only one LED goes off even if several buttons are pressed. Only the first activated button in the row is indicated. When this e-stop button is released again the LED lights up again and the LED of the next activated button in the row goes off.

If the variant B\_ 5922/0\_2, B\_ 5922/0\_4, B\_ 5922/0\_5, B\_ 5922/1\_2, B\_ 5922/1\_4, B\_ 5922/1\_5 is connected to a IP 5503 in Plug and Play modus the outputs show the state of the E-stop buttons and the LEDs the state of the status LEDs I1 - I8 on the e-stop monitor.

## Indicators

- green LED „ON“: on, when supply connected (at B\_ 5922/0\_ \_, B\_ 5922/1\_ \_ only)
- yellow LED: on, when bus active (only with variants with fieldbus)
- green status LEDs: Continuous: when all e-stop buttons are closed  
Off: when corresponding e-stop button is pressed
- Flashing of one status LED only when:
- manual reset and
  - released e-stop buttons and
  - signal not reset
- Reset can be made with button on front or with remote reset-button.

Flashing of all status LEDs: The input S11 of the e-stop monitor is not connected. A reason could be a broken wire between this terminal and S11 of the e-stop module. When several e-stop monitors are connected in series this status also occurs when the previous shows an activated e-stop button.

## Notes



When using B\_ 5922/00\_ or B\_ 5922/01\_ for single channel monitoring or 2-channel connection of the e-stop chain the e-stop monitor has to be connected to the loop between S11 and S12 of the e-stop module. In this way channel AB is monitored.



In a 2-channel e-stop loop, the e-stop monitor has to be connected to the channel which normally is between the terminals S11 and S12 of the e-stop module. The E-stop monitor and the e-stop module have to be connected to the same DC 24 V power supply. When using an E-stop module with AC-supply the minus-terminal of the e-stop monitor (A2) must be connected to the minus-terminal of the e-stop control voltage (S21 or PE) on the e-stop module.



The product is not a safety component. The use of proven components and proven safety principles in conjunction with Dold emergency stop modules means that the emergency stop chain will not be affected.

## Set-up Procedure

### CANopen mode (B\_ 5922 /0\_ \_, B\_ 5922/1\_ \_)

With switch position "CANopen" the CANopen protocol is active on the interface. The configuration is made with the programming software PN 5501 in conjunction with minimaster IL 5504 / IN 5504 or e.g. with ProCANopen. The corresponding configuration file on CD can be ordered under order no. PN 5501, article no. 0052860

### Plug and Play mode (B\_ 5922 /0\_ \_, B\_ 5922/1\_ \_)

With switch position "Plug and Play" a variant of the CANopen protocol is active on the interface. The unit setting is done with a switch on the front, see picture below. If a system is on plug and play mode it can be switched over to CANopen protocol at any time.

### Address setting Plug and Play mode

To allow the E-stop monitor to communicate with a corresponding device via the CAN-bus the addresses have to be set with the 2 rotational switches on the front according to the table below. Addresses between 1...49, 51...99 are possible. Address 0 and 50 cannot be chosen in Plug and Play mode.

E-stop monitor BH/BL 5922 with address	transmits to	output module IP 5503 with address
1	→	51
.		.
49	→	99

Example of setting:  
left switch  $10^1$ : Address 14  
right switch  $10^0$ : to position 1 x  $10^1$   
to position 4 x  $10^0$


### Notes for Plug and Play mode

On the BL-models with 2-channel monitoring of the e-stop loop 2 addresses and 2 transmission rates can be chosen (channel AB and channel CD). For correct operation the address settings must be different and the transmission rate settings must be the same. The screen of the bus wire has to be connected to A2 of the e-stop monitor.

### Set-up procedure

- 1.) Connect CAN-bus to terminals CAN\_L and CAN\_H
- 2.) Terminate the physical end of the bus by connecting a termination resistor of 120  $\Omega$  between CAN\_L and CAN\_H on the first and last module of the bus
- 3.) Connect screen of bus wire to A2
- 4.) Select transmission rate (e.g. 20 K bit/sec) using the rotational switch on the front (see drawing)
- 5.) Select address of the module using rotational switches on the front (see drawing and above example)

- Attention:**
- To communicate in a system configured for Plug and Play modus it is necessary to connect one BH/BL 5922 with adress 1 to the CAN-bus.
  - The device address, the transmission rate and the change of operating mode between CANopen and Plug and Play will only be accepted when the device is powered up.

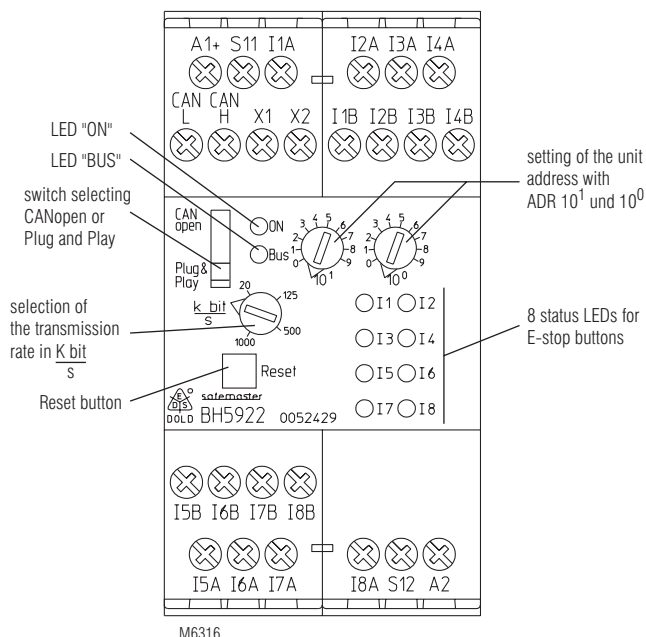

## Description of Data Transmission for units with bus interface

The CANopen transmit PDO has follow structure:

Read8Inputs	Read8Inputs_old	Status8Inputs	Saved8Inputs	Dummy1	Dummy2	Dummy3	Device_ID
-------------	-----------------	---------------	--------------	--------	--------	--------	-----------

The bytes in the data string have the following content:

Read8Inputs: State of the e-stop buttons  
 Bit x = 0 e-stop button  
 Bit x = 1 e-stop button not active

Read8Inputs\_old: State of e-stop button at time t-1. The designation of the bits is the same as with Read8Inputs

Saved8Inputs: Latched state of the e-stop buttons, if the e-stop monitor is operated in manual reset mode.  
 To detect that the manual reset mode is selected bit 1 in byte Status8Inputs can be used.

Status8Inputs: Actual state of e-stop monitor  
 Bit 0 = 1 One e-stop button is activated  
 Bit 1 = 1 E-stop monitor operated in manual reset mode  
 Bit 2 = 1 The e-stop monitor was acknowledgement (activation of reset button or remote reset)  
 Bit 3 = 1 At the beginning of the e-stop loop (terminal S11 or S21) the correct voltage is present. If bit 3 is 0 then the wire between e-stop modul and e-stop monitor is interrupted.

Device\_ID: Device Id = 0 x 0 C E-stop monitor for connection of 4 e-stop buttons (.04)  
 Device Id = 0 X 0 D E-stop monitor for connection of 8 e-stop buttons (.08)

Dummy 1-3: not used Bytes

Possible state of the bytes depending on the activation of the e-stop buttons:

Mode	actuation	active			not active			reset		
		E*	ST*	SP	E*	ST*	SP	E*	ST*	SP
auto reset mode	Initial position	FF	0C	FF	FF	0C	FF			
	no S11	FF	04	FF	FF	0C	FF			
	S1 active	FE	0D	FE	FF	0C	FF			
	S2 active	FD	0D	FD	FF	0C	FF			
	S3 active	FB	0D	FB	FF	0C	FF			
	S4 active	F7	0D	F7	FF	0C	FF			
	S5 active	EF	0D	EF	FF	0C	FF			
	S6 active	DF	0D	DF	FF	0C	FF			
	S7 active	BF	0D	BF	FF	0C	FF			
S8 active	7F	0D	7F	FF	0C	FF				
manual reset mode	Initial position	FF	0E	FF	FF	0E	FF	FF	0E	FF
	no S11	FF	06	FF	FF	0E	FF	FF	0E	FF
	S1 active	FE	0B	FE	FF	0A	FE	FF	0E	FF
	S2 active	FD	0B	FD	FF	0A	FD	FF	0E	FF
	S3 active	FB	0B	FB	FF	0A	FB	FF	0E	FF
	S4 active	F7	0B	F7	FF	0A	F7	FF	0E	FF
	S5 betätigt	EF	0B	EF	FF	0A	EF	FF	0E	FF
	S6 active	DF	0B	DF	FF	0A	DF	FF	0E	FF
	S7 active	BF	0B	BF	FF	0A	BF	FF	0E	FF
S8 active	7F	0B	7F	FF	0A	7F	FF	0E	FF	

\*) E = Value for Read8Inputs  
 ST = Value for Status8Inputs  
 SP = Value for Saved8Inputs

## Technical Data

**BCD output, high active:** (only with B\_ 5922/001, B\_ 5922/011)

O3	O2	O1	O0	Description
0	0	0	0	Input S11 without voltage
0	0	0	1	E-stop 1 active
0	0	1	0	E-stop 2 active
0	0	1	1	E-stop 3 active
0	1	0	0	E-stop 4 active
0	1	0	1	E-stop 5 active
0	1	1	0	E-stop 6 active
0	1	1	1	E-stop 7 active
1	0	0	0	E-stop 8 active
1	1	1	1	no E-stop active

**BCD output, low active:** (only with B\_ 5922/003, B\_ 5922/013)

O3	O2	O1	O0	Description
1	1	1	1	Input S11 without voltage
1	1	1	0	E-stop 1 active
1	1	0	1	E-stop 2 active
1	1	0	0	E-stop 3 active
1	0	1	1	E-stop 4 active
1	0	1	0	E-stop 5 active
1	0	0	1	E-stop 6 active
1	0	0	0	E-stop 7 active
0	1	1	1	E-stop 8 active
0	0	0	0	no E-stop active

**BCD output, high active:** (only with B\_ 5922/021, B\_ 5922/031)

O7	O6	O5	O4	O3	O2	O1	O0	Description
0	0	0	0	0	0	0	0	Input S11 without voltage
0	0	0	1	0	0	0	1	E-stop 1 active
0	0	1	0	0	0	1	0	E-stop 2 active
0	0	1	1	0	0	1	1	E-stop 3 active
0	1	0	0	0	1	0	0	E-stop 4 active
0	1	0	1	0	1	0	1	E-stop 5 active
0	1	1	0	0	1	1	0	E-stop 6 active
0	1	1	1	0	1	1	1	E-stop 7 active
1	0	0	0	1	0	0	0	E-stop 8 active
1	1	1	1	1	1	1	1	no E-stop active

**BCD output, low active:** (only with B\_ 5922/023, B\_ 5922/033)

O7	O6	O5	O4	O3	O2	O1	O0	Description
1	1	1	1	1	1	1	1	Input S11 without voltage
1	1	1	0	1	1	1	0	E-stop 1 active
1	1	0	1	1	1	0	1	E-stop 2 active
1	1	0	0	1	1	0	0	E-stop 3 active
1	0	1	1	1	0	1	1	E-stop 4 active
1	0	1	0	1	0	1	0	E-stop 5 active
1	0	0	1	1	0	0	1	E-stop 6 active
1	0	0	0	1	0	0	0	E-stop 7 active
0	1	1	1	0	1	1	1	E-stop 8 active
0	0	0	0	0	0	0	0	no E-stop active

0 = voltage on output: 0 V  
1 = voltage on output: 24 V

**CANopen interface** (B\_5922/0\_ , B\_5922/1\_ )

B\_5922/1\_ : according to ISO 11 898-1, galvanic separation  
wiring: screened twisted pair  
transmission rate: settable 20 K bit/s, 125 K bit/s, 500 K bit/s, 1 M bit/s,  
max. length: 20 K bit/s = 2500 m  
125 K bit/s = 500 m  
500 K bit/s = 100 m  
1 M bit/s = 25 m

**Plug and Play**

transmission rate: 20 K bit / sec (recommended)



Both physical ends of the 2-wire system must be terminated with a 120 Ω resistor between the terminals CAN\_L and CAN\_H.

## Technical Data

**Input**

**Nominal voltage  $U_N$  (A1/A2):** DC 24 V  
**Voltage range:** 0,8 ... 1,1  $U_N$   
**Control voltage on S11/S12:** DC 24 V  
**Reset input  $X_1, X_2$ :** Voltfree contact  
**BCD interface:**  
Output (O0,O1,O2, O3): Transistor switching + switched /auxiliary voltage:  
Switching capacity: DC 24 V  
Residual voltage: 40 mA short circuit proof  
typ. 0,6 V

**General Data**

**Operating mode:** Continuous operation  
**Temperature range:**  
Operation: - 20 ... + 60 °C  
Storage: - 40 ... + 70 °C  
**Altitude:** < 2.000 m  
**EMC**  
Electrostatic discharge: 8 kV (air) IEC/EN 61 000-4-2  
Surge proof against wire bound surges, induced by high frequency fields: 10 V class 3, f = 150 kHz - 80 MHz IEC/EN 61 000-4-6  
Fast transients: 2 kV IEC/EN 61 000-4-4  
Surge voltages between wires for power supply: 1 kV IEC/EN 61 000-4-5  
between wire and ground: 2 kV IEC/EN 61 000-4-5  
Interference suppression: Limit value class A\*)

\*) The device is designed for the usage under industrial conditions (Class A, EN 55011).  
When connected to a low voltage public system (Class B, EN 55011) radio interference can be generated.  
To avoid this, appropriate measures have to be taken.

**Degree of protection**

Housing: IP 40 IEC/EN 60 529  
Terminals: IP 20 IEC/EN 60 529  
**Housing:** Thermoplastic with V0-behaviour to UL subject 94

**Vibration resistance:**

Amplitude 0,35 mm IEC/EN 60 068-2-6

frequency 10 ... 55 Hz

20 / 060 / 04 IEC/EN 60 068-1

**Climate resistance:**

EN 50 005

**Terminal designation:** 1 x 4 mm<sup>2</sup> solid or 1 x 2,5 mm<sup>2</sup> stranded ferruled or 2 x 1,5 mm<sup>2</sup> stranded ferruled  
**Wire connection:** DIN 46 228-1/-2/-3/-4 or 2 x 2,5 mm<sup>2</sup> stranded ferruled  
DIN 46 228-1/-2/-3  
Terminal screws M3.5, box terminals with wire protection  
DIN rail IEC/EN 60 715

**Wire fixing:**

**Mounting:**  
**Weight:**  
BH 5922: approx. 255 g  
BL 5922: approx. 470 g


**Dimensions**

**Width x height x depth:**


BH 5922: 45 x 86 x 121 mm  
BL 5922: 90 x 86 x 121 mm




## Application Examples

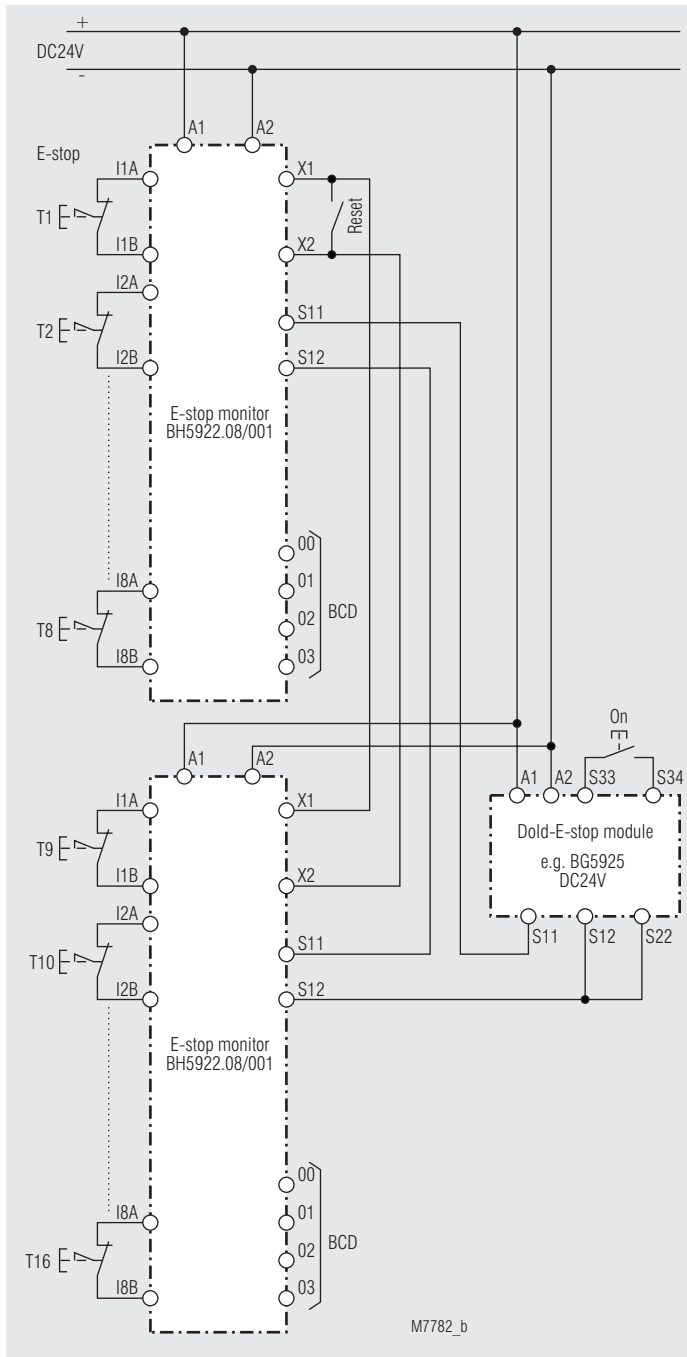

Pic 3: Monitoring of 16 e-stop buttons with e-stop monitor, single-channel connection, e-stop module 2-channel. BCD-output for remote display of the status of the e-stop buttons

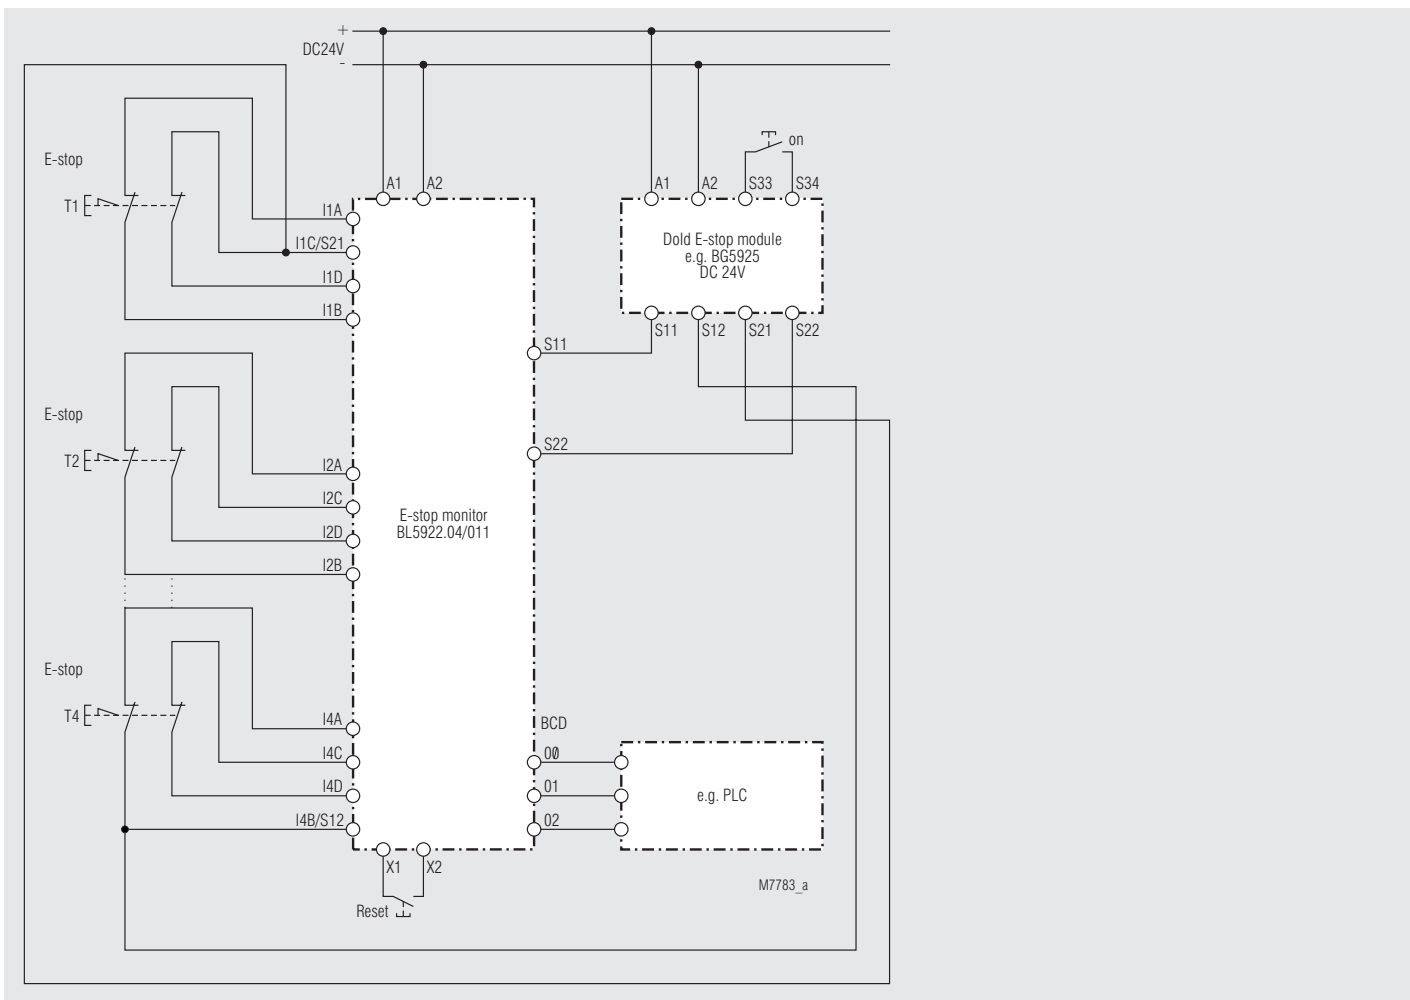


Pic 4: Monitoring of 4 e-stop buttons with e-stop monitor, 2-channel connection, BCD output, single-channel monitoring

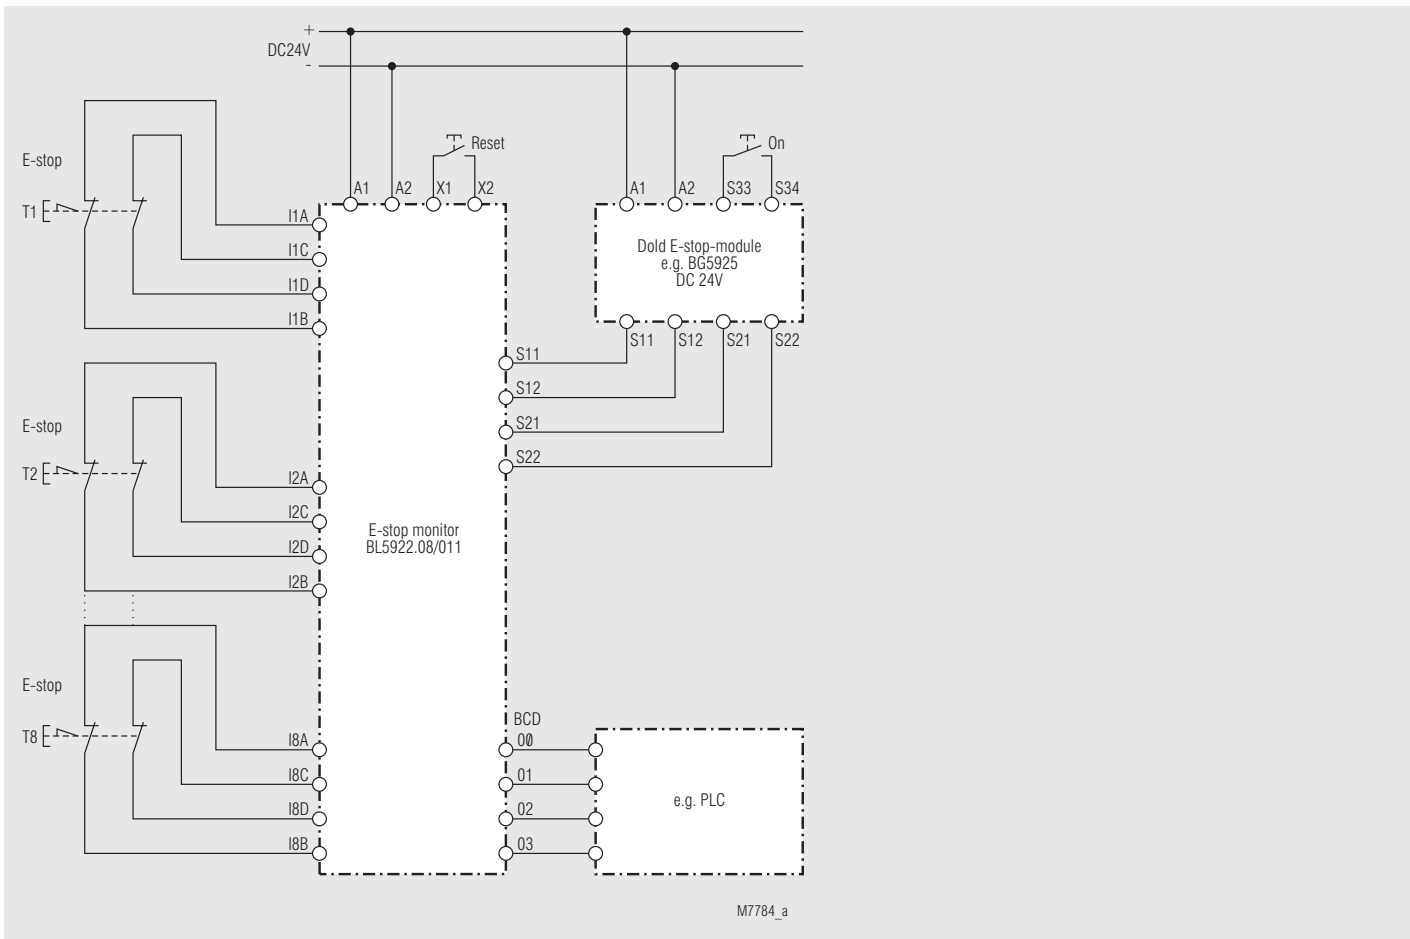


Pic 5: Monitoring of 8 e-stop buttons with e-stop monitor, 2-channel connection, BCD output, single-channel monitoring




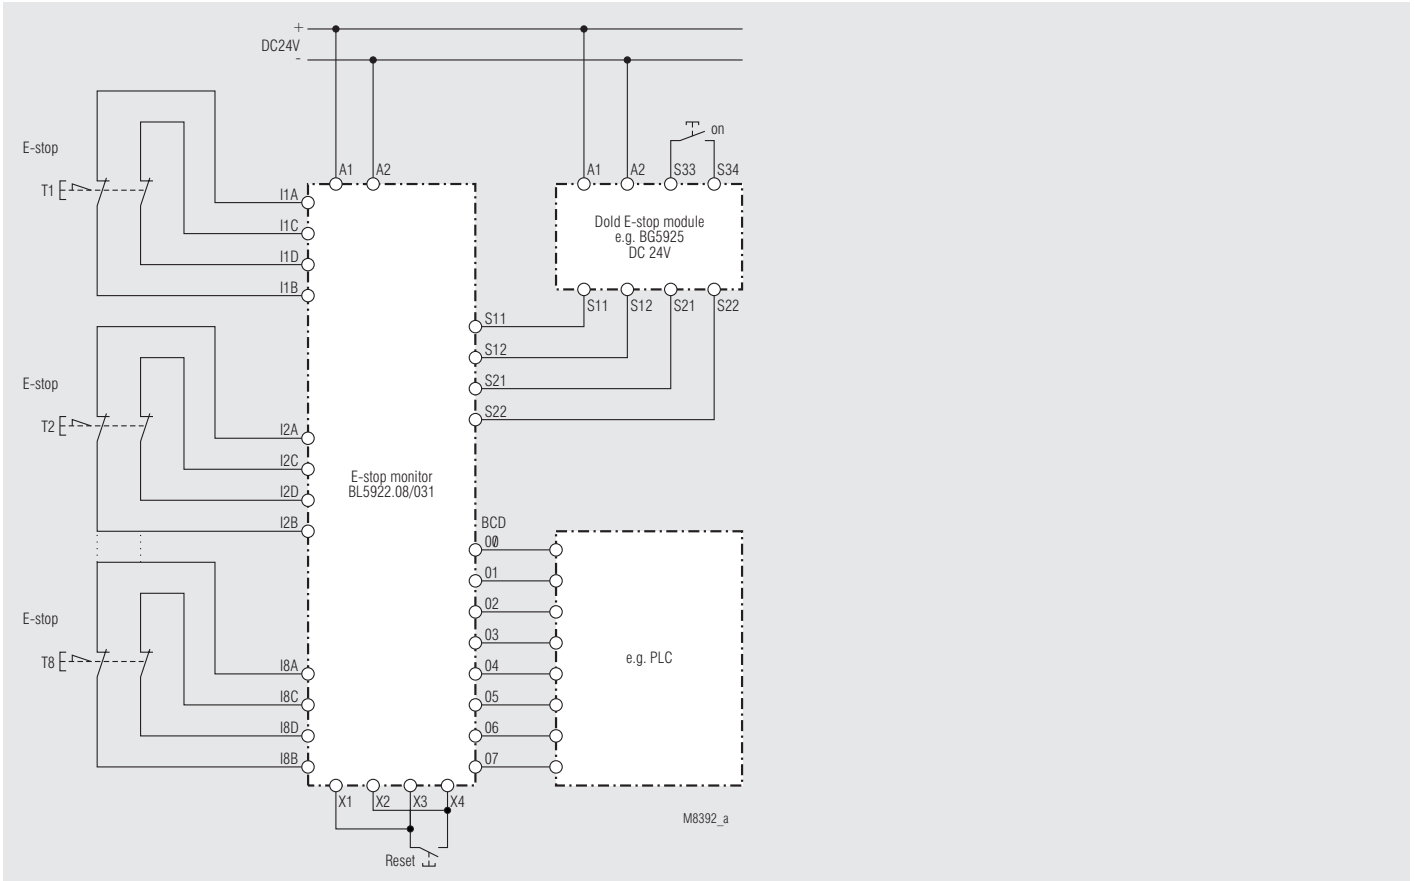


Pic 6: Monitoring of 8 e-stop buttons with e-stop monitor, 2-channel connection, 2-channel monitoring (2. channel with cross fault monitoring), BCD output

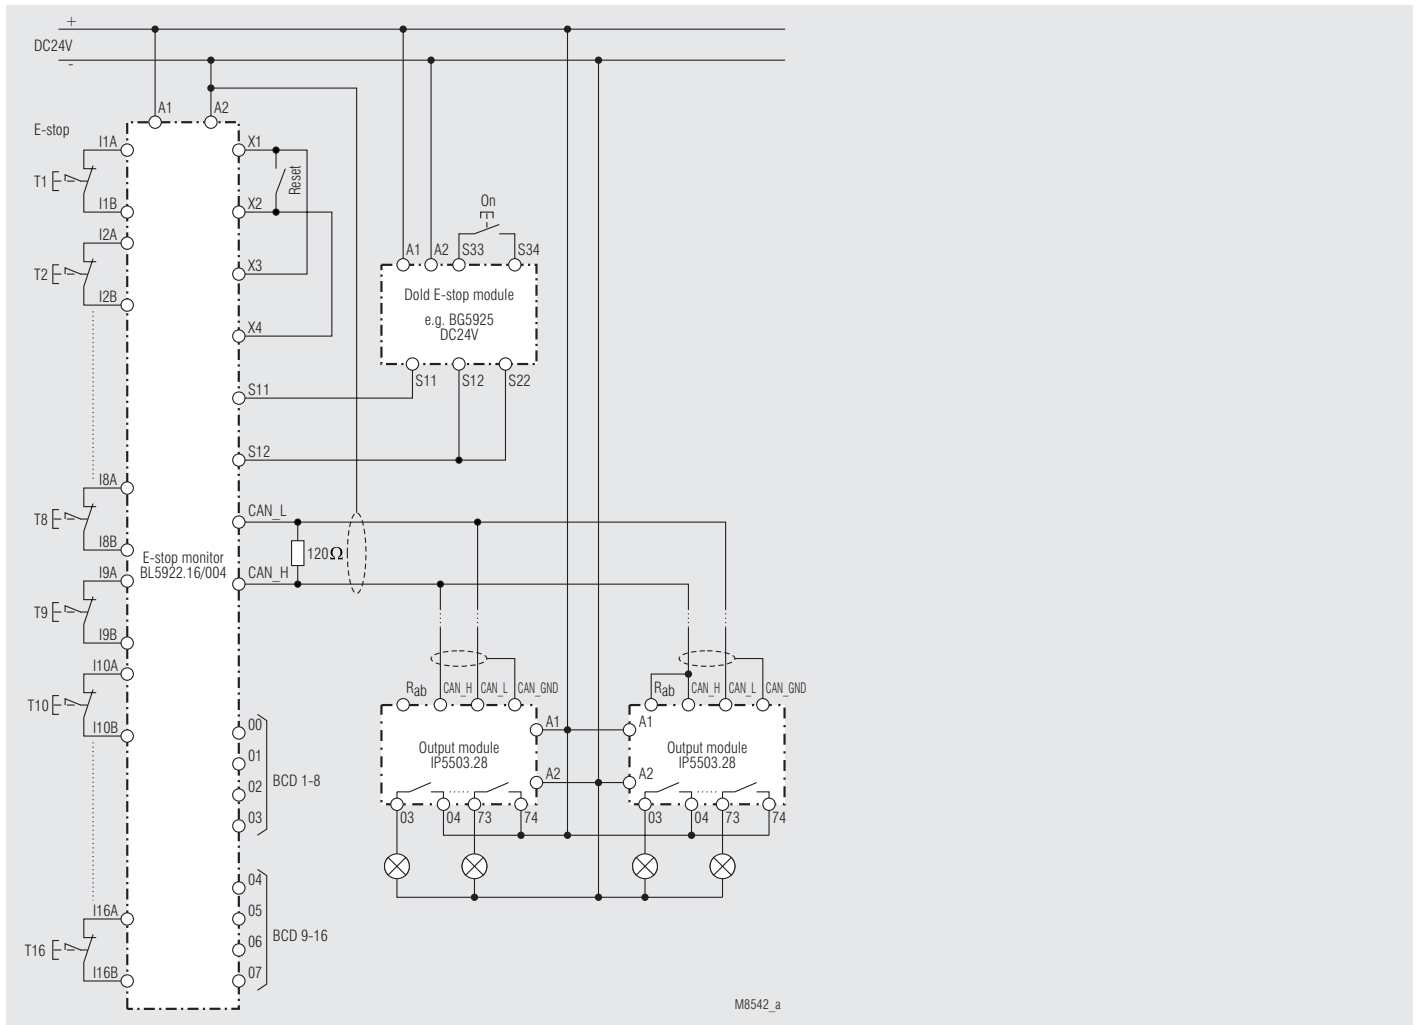

Pic 7: Monitoring of 16 e-stop buttons with e-stop monitor, single-channel connection, single-channel monitoring

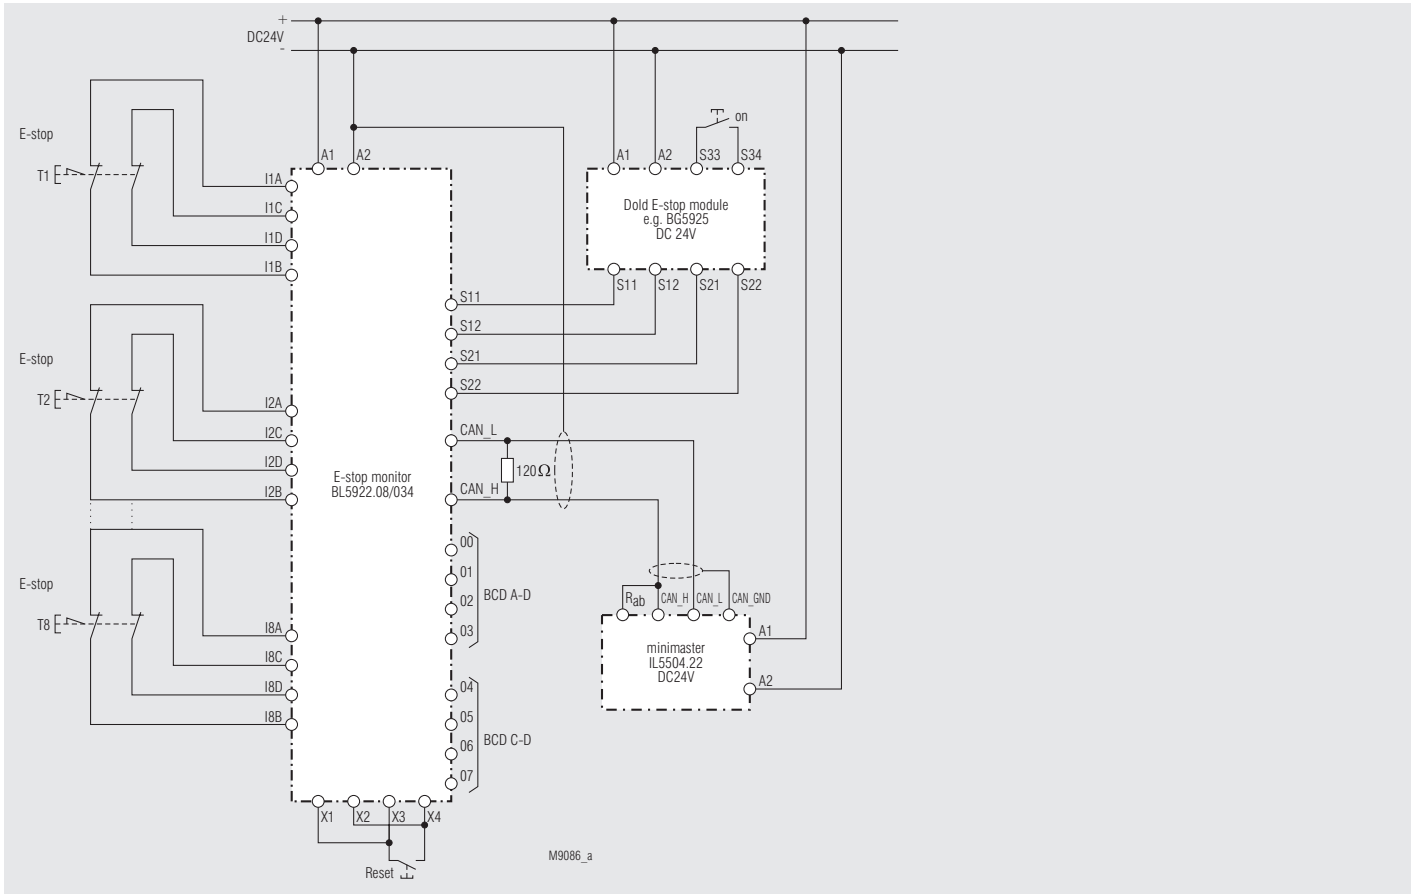

Pic 8: Monitoring of 8 e-stop buttons with e-stop monitor, 2-channel connection, 2-channel monitoring cross fault monitoring with CANopen minimaster IL 5504

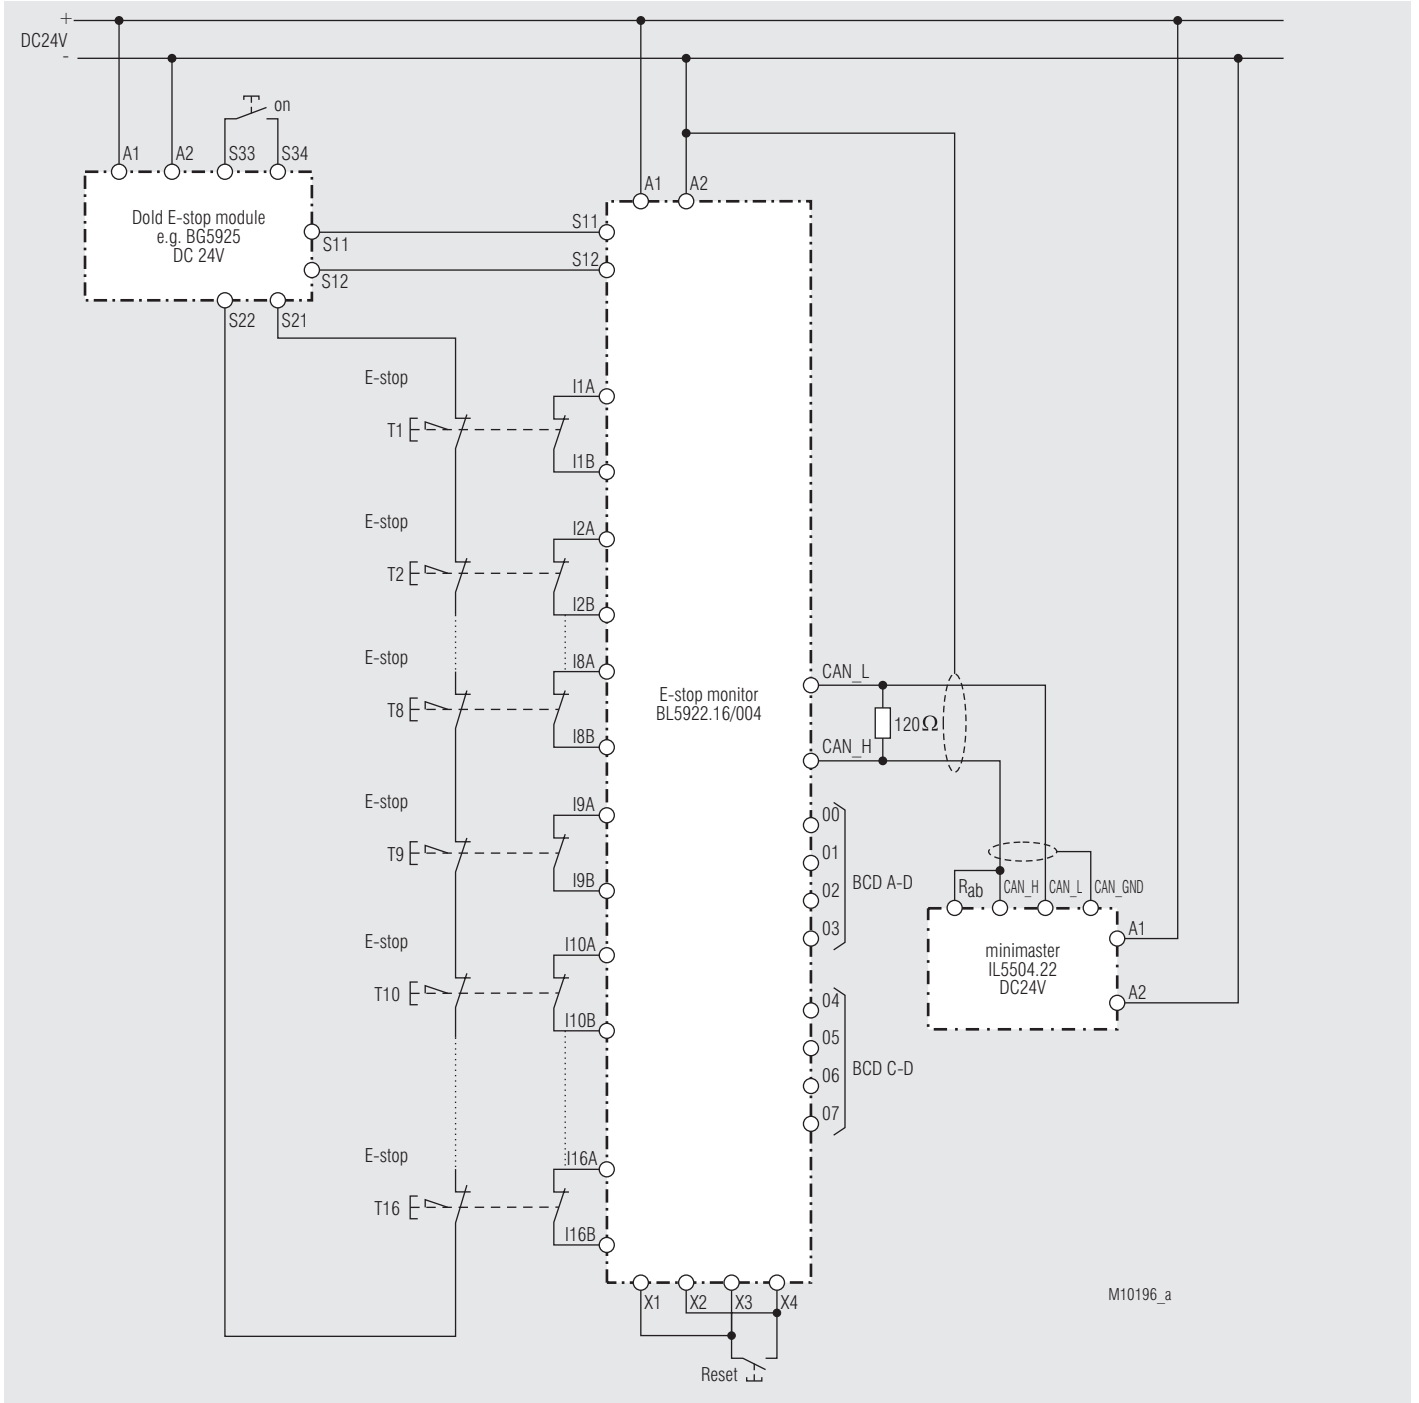

Pic 9: Monitoring of 16 e-stop buttons with e-stop monitor, single-channel connection, e-stop-module 2-channel, cross fault monitoring. BCD-output for remote display of the status of the e-stop buttons.

